

Assembly instructions

ATTENTION

BEFORE ASSEMBLING THIS CHANGE TABLE, READ AND UNDERSTAND THE INSTRUCTIONS.

INCORRECT ASSEMBLY MAY MAKE THE CHANGE TABLE UNSAFE.

AS SMALL PARTS ARE INVOLVED IN ASSEMBLY, CHILDREN SHOULD BE KEPT CLEAR OF ASSEMBLY AREA.

1. Lay change top assembly down on a clean, smooth surface. Align and insert legs A & B into corresponding A & B top assembly, while pressing popup pins, push the legs into frame completely until the pop up pins are engaged.



2. Repeat same procedure with C & D leg set.



3. Stand the frame.


4. Assemble bottom shelf with screws supplied.



5. Place secondary lock down on both sides. Place accessory tray on tray holder.



6. For compact storage, remove accessory holder, lift safety locks and close frame.

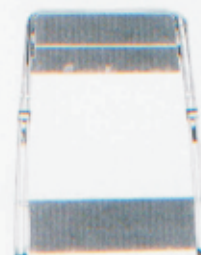

CONVENIENT CHANGE TABLE INSTRUCTIONS

Warning:

Please keep these instructions for future reference

1. Never leave your child unattended.
2. Suitable for babies till max. 12 months age.
3. Always use the safety strap provided to secure your child when using the change table.
4. The weight of the child should not exceed 13.6 kg.
5. Do not allow older child to climb or play on changer.
6. Keep the change table away from all electrical items and heat source.
7. Do not use the change table for a manner it was not designed for.
8. Do not use the change table if any parts seem to be broken or missing.

Care & Maintenance

To extend the life of your change table you must always keep it clean, and it is preferred not to keep it under direct sunlight as this may cause some damages to your change table.

The change table pad and other fabric parts may be cleaned using a damp sponge with either soap or a mild detergent. Before storing the table away or reusing it, make sure it is completely dry.

Before using the change table, always check all parts including screws, nuts and other fasteners for any loose items or broken parts. If you happen to find any broken or missing parts, be sure to contact us as soon as possible to have those parts replaced for you.

Warranty

This product is covered with a 12 month warranty on the condition the product has not been neglected, accidentally damaged, or misused and is used under normal use. The warranty begins from the date of purchase.

Hardware contents:

The following items should be found inside your change table.

A. Top assembly



B. Bottom shelf



C. Leg sets



D. Accessory holder



E. 4 screws

