


EVO

instruction manual




mutsy 
simple human magic




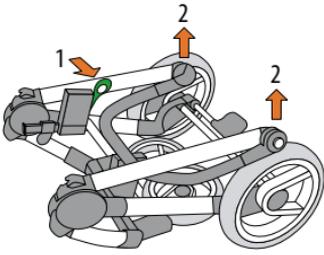


a

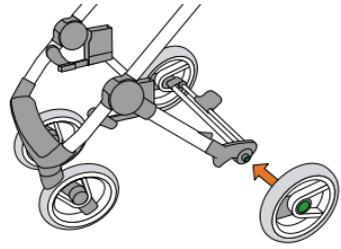


e

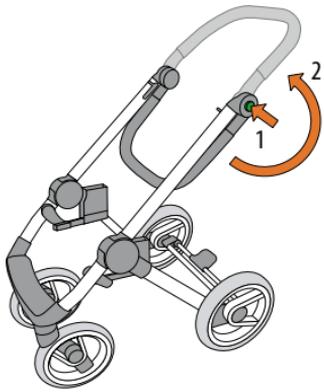


b

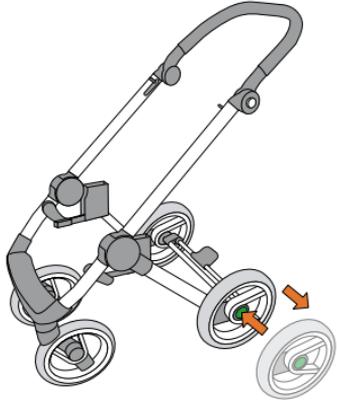


f

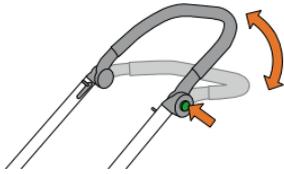


c

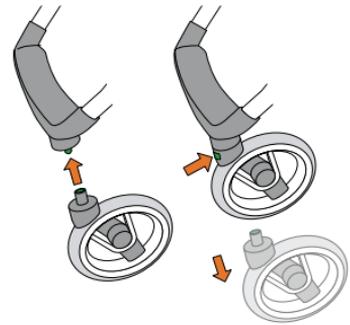


g

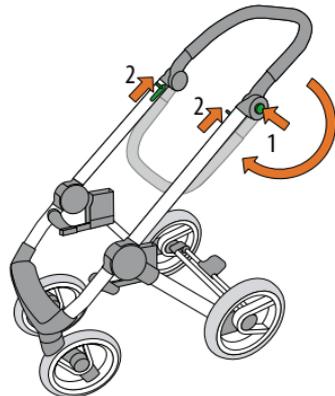


d

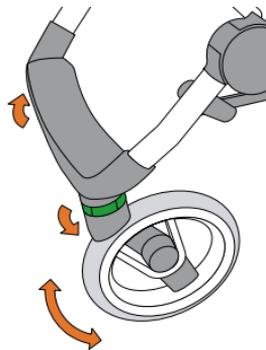


h

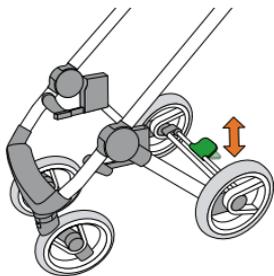


i

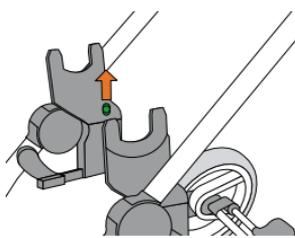

m

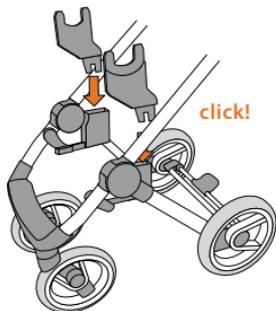


j

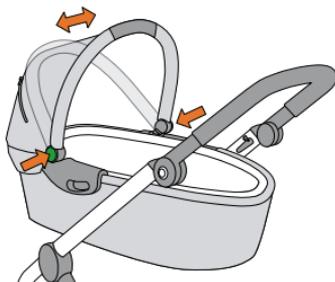


n




k

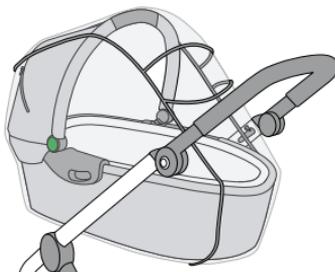


o

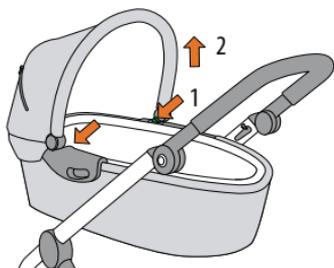

l

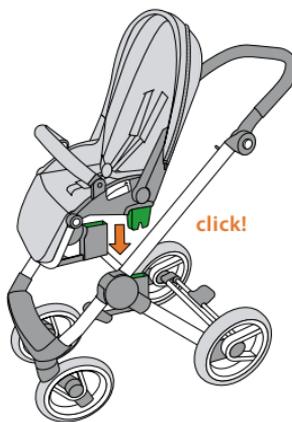


p

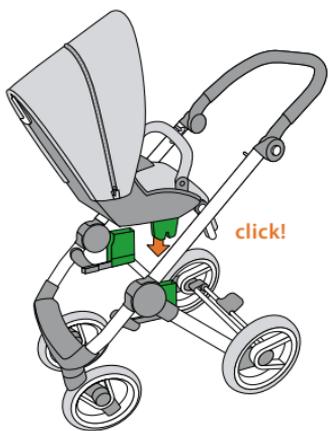

q




u

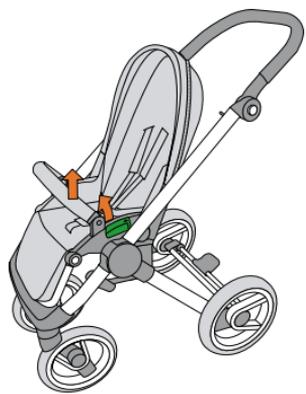


r




V1

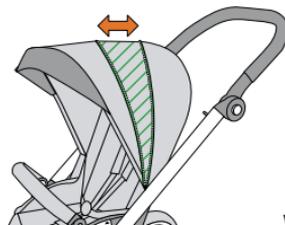


V2

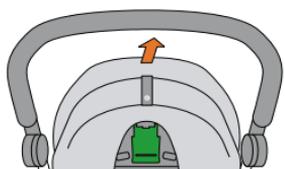

s

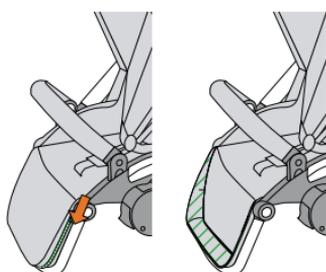


w

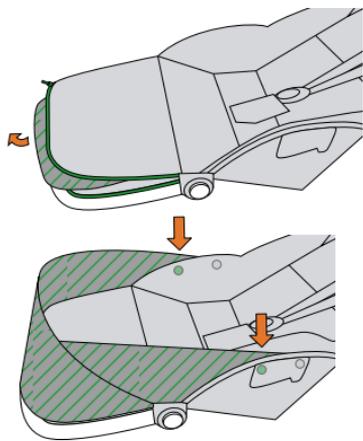


t




x

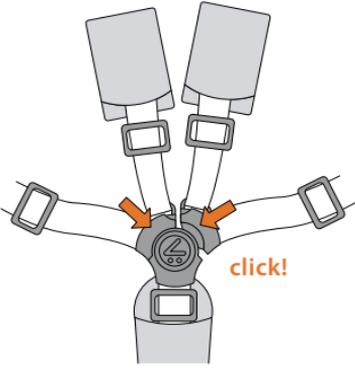

y1

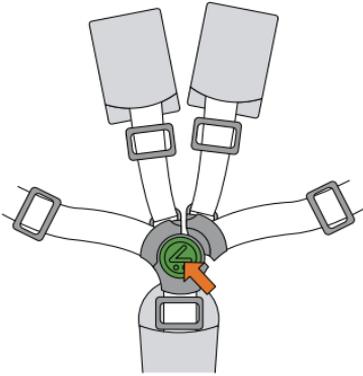

y2

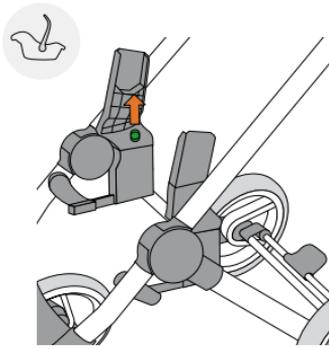

z

Instruction manual Mutsy Evo

Content

Introduction	p 2
Warnings.....	p 2
Warrenty	p 4
Maintenance and points for attention.....	p 5
Content of the boxes	p 6
Enumeration pertaining to the drawing.....	p 6
Assembly	p 7
Orientation	p 7
The frame.....	p 7
The wheels.....	p 7
Steering	p 8
The brake	p 8
The push bar	p 8
The carry cot	p 8
The seat.....	p 10
The Maxi-Cosi car seat.....	p 12

Introduction

- In order to make optimal use of this product we recommend you use it properly and maintain it well. Read these instructions for use carefully before you start using the seat and keep the instructions for future reference.
- Should you have any questions, comments or complaints then contact your retailer.
- If you want to know what accessories are available for this product or if you want to stay informed of new Mutsy products then go to www.mutsy.com.

WARNINGS

- **IMPORTANT:** Keep these instructions for future reference.
- **WARNING:** Failure to observe the instructions for use may put your child's safety at serious risk.
- **WARNING:** You are responsible for your own child's safety.
- ! • **WARNING:** To avoid injury or death:
 - Always apply the brakes whenever the pram / stroller is stationary.
 - Do not leave children unattended.
 - Secure the child in the harness at all times.
 - Do not carry extra children or bags on this pram / stroller.
 - Make sure children are clear of any moving parts if you adjust the pram / stroller.
- **WARNING:** Use the harness at all times.

- WARNING: Never leave the harness buckled when not fitted to a child to prevent a strangulation hazard.
- WARNING: Use the tether strap to stop the pram / stroller rolling away.
- WARNING: Don't use the pram / stroller near open fire or exposed flame.
- WARNING: This vehicle is designed for use on flat or gently slopes and may be unstable on higher sloping and uneven surfaces.
- WARNING: Failure to observe the instructions may cause the vehicle tipping over.
- WARNING: If your child is younger than 6 months always use the cot or the reclined carriage position of the seat.
- WARNING: Do not use the seat with any other models of pram/stroller.
- WARNING: This vehicle is suitable for children from birth up to 25 kg.
- WARNING: Do not use the carrycot once the child can sit up unaided. The maximum weight of the child is 9 kg.
- WARNING: The seat is not suitable for children under 6 months.
- WARNING: The seat is suitable for children from 6 months up to 25 kg.
- WARNING: The pushchair is suitable for children up to 25 kg.
- WARNING: The maximum permissible weight as indicated on the relevant product applies when using a car seat.
- WARNING: For car seats used in conjunction with the chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable carry cot, cot or bed.
- WARNING: A shopping basket is located between the wheels underneath the chassis. The maximum permissible weight for this basket is 5 kg.
- WARNING: The carry cot has a number of bags. The maximum permissible weight in each bag is 1 kg.
- WARNING: Overloading can result in a dangerous, instable situation.
- WARNING: Bags, accessories or both, other than recommended by the manufacturer, can, when placed on the product, result in an unstable pram. Exclusively use original Mutsy accessories.
- WARNING: Shopping bags or other heavy objects must not be hung on the push bar due to the risk of toppling.
- WARNING: Do not let your child play with this product.
- WARNING: Never leave your child unattended, this can be dangerous.
- WARNING: To avoid pinching of fingers or other body parts, keep children away from the chassis when folding and unfolding the product.
- WARNING: Ensure that the chassis and handlebar are completely unfolded and that all locking devices are engaged before use.
- WARNING: Check that the carry cot or seat unit or car seat attachment devices are correctly engaged before use.
- WARNING: Before use, check that the attachment points of the carry cot, the pushchair or the adapters have been secured correctly.
- WARNING: Always check that the accessories have been secured properly before

you start using the pram.

- WARNING: Do not use the carry cot with a mattress thicker than 25 mm / 0,984 inch. Do not add an additional mattress.
 - WARNING: Remove the carrying handles and keep the carrying handles out of the children's reach when the pram is in use.
 - WARNING: Only use the pram for one child at a time.
 - WARNING: Make sure that the brakes are applied when placing or removing your child.
 - WARNING: Always use the restraint system.
 - WARNING: Always secure your child with the 5-point safety harness combined with the strap running between the legs.
 - WARNING: You must take your child from the pram before lifting the pram or using stairs, escalators or lifts.
 - WARNING: You need to tilt the pram/stroller and drive to the rear wheels if you go on or off a curb.
 - WARNING: Always apply the brakes when parking the pram.
 - WARNING: This product is not suitable for running or skating.
 - WARNING: Use only replacement parts supplied or recommended by Mutsy.
 - ! • WARNING: Use the tether strap to stop the pram/stroller rolling away.
 - WARNING: Always keep the pram/stroller away near an open fire or exposed flame.
 - WARNING: The pram/stroller is only designed for use on flat or gently sloping surfaces and may become unstable on higher sloping and uneven surfaces.
- The Mutsy EVO has been approved according to AS/NZS standard 2088-2013.

Warranty

There's a warranty term of 2 years for all Mutsy products, starting the day of purchase. When a production error is found, Mutsy will provide a solution in cooperation with the retailer. Reparation of such faults are covered by the warranty. The warranty is not valid on exchanging or returning of Mutsy products.

The warranty is only given if you provide the retailer you purchased the product from, with the following:

- a filled in warranty card
- a copy of your proof of purchase
- a clear description of the defect
- the product itself

The warranty card can be found at:

www.mutsy.com/gben/service/warranty

Please complete this card in full and correctly and return by e-mail. You

are also asked to enter the serial number on the card. You will find this number on a white sticker on the product, usually underneath.

The warranty does not cover:

- fading or changing of colors
- water damage to the lining
- defects as a result of using Mutsy counterfeited products
- a claim without the proof of purchase
- unjust or improper use
- wear from normal daily use of the product
- damage from bad maintenance, neglect or an accident
- damage after alteration by the customer, unauthorized by Mutsy
- damage reported after more than 2 months after occurrence
- The guarantee provided by Mutsy does not cover any shrinkage or defects of the fabric parts that may develop as a result of cleaning the fabric parts.

Safety is extremely important to Mutsy. That is why we also meet the very highest safety standards:

- Europe: EN 1888
- UK: BS EN 1888
- Canada: SOR/ 85 -379
- AS/NZS standard 2088-2013

Should you have any questions or comments, please contact us at:
www.mutsy.com/gben/contact

Maintenance and points for attention

The frame

- Regularly check the locking mechanism of the frame. After cleaning, you can spray some Teflon spray on it and rub it with a soft cloth. This also applies to other moving parts.

The wheels

- To let the wheels run more smoothly the wheel axles must regularly be cleaned and lubricated with acid-free vaseline. The wheels can never be lubricated with oil.

Pumping up the air tyres (EVO accessory: rear wheels air tyre set)

- The air pressure in the air tyres may decrease after a while. Check the pressure regularly and is necessary pump up the tyres.
- Press the pump firmly onto the valve. Pump up the tyres until the required air pressure has been reached. The air pressure in the tyres may never exceed 16 PSI / 1.1 bars.

- Air tyres may leave traces on some surfaces.

The fabrics

- Removable fabric parts can be washed in the washing machine on a wool cycle at 30°C. Wash without bleaching agent and do not put in the tumble dryer. Do not iron or dry clean. Before washing fasten all zips, velcro and poppers.
- To find out how to take the seat covers on and off the pushchair, please go the FAQs in the 'Service' section of our website.
- All Mutsy fabrics have been tested for water resistance but if the pram gets really wet, water can penetrate the inner and outer fabrics and leave marks. To prevent this we recommend that you always use the rain covers in case of wet weather.
- You can treat stains on the outer fabric or lining of non-removable parts using a liquid, bleach-free soap. Always treat the whole area.
- Always let a wet pram dry with the hood fully unfolded.
- Even though Mutsy fabrics are selected with the utmost care and tested for colour fastness, fabrics can discolour. Mutsy cannot be held liable for any discolouration.

Content of the boxes

- 1 frame with basket
- 2 front wheels
- 2 rear wheels
- 1 seat (optional)
- 1 carry cot (optional)

Overview: Enumeration pertaining to the drawing

01. push bar
02. unlock buttons
03. push bar adjustment
04. frame attachment point
05. brake pedal
06. rear wheel
07. front wheel
08. swivel-lock
09. foot rest
10. back support
11. leg support
12. leg support adjustment
13. seat unlocking
14. bumper bar

15. 5-point safety harness
16. hood
17. unfold lock

Assembly

Assembly sequence

- Unlock and unfold the frame
- Assemble the rear wheels
- Assemble the front wheels
- Place the carry cot or seat

Orientation

- References in the text to the front, rear, left or right side of the stroller are described from the perspective of a user walking behind the stroller.

The frame

Unfold the frame (a, b)

- Push the frame lock inwards (a1) and move the top of the frame upwards until you hear a click (a2).
- Push the buttons on both sides of the push bar (b1) and turn the push bar upwards (b2).
- The push bar has 4 different height positions. Release the buttons when the push bar is in the desired position.
- Before use always check that the stroller has been unfolded and secured correctly.

Fold the frame (d)

- Stand behind the frame and put the frame on the brake.
- Push the buttons on both sides of the push bar and turn the push bar downwards until it has reached the lowest position (d1).
- This position is indicated by means of a marking on the hinge point.
- Pull the unlock buttons on the inner side of the frame towards you (d2) and then push the top part of the frame downwards.
- The unfold lock will automatically lock when folding.
- The frame is folded in an extra compact way if you first lock the swivelling wheels before you fold (h).

The wheels

Assemble the rear wheels (e)

- Push the button and slide the axle of the rear wheel in the rear wheel housing until you hear a click. Pull the wheel to check that it has been attached firmly.

Disassemble the rear wheels (f)

- Push the button on the outside of the rear wheel and pull the wheel from the rear wheel housing.

Assemble the front wheels (g)

- Slide the axle of the front wheel upwards in the front wheel housing until you hear a click. Pull the wheel to check that it has been attached firmly.

Disassemble the front wheels (g)

- Push the button on the front side of the front wheel and pull the wheel from the front wheel housing.

Steering

The swivelling wheels (h)

- Turn the ring above the front wheel on both sides inwards to lock the swivelling wheels. The swivelling wheels will automatically be locked when the wheels are placed in the driving direction.
- Turn the ring above the front wheel on both sides outwards to unlock the swivelling wheels.

The brake (i)

- A brake pedal is available in the centre of the rear axle. Push the pedal downwards with your foot to block the brake. Push the pedal upwards with your foot to unblock the brake.

The push bar (c)

- Push the buttons on both sides of the push bar and turn the push bar upwards.
- The push bar has 4 different height positions. Release the buttons when the push bar is in the desired position.

The carry cot (up to 9 kg)

- The carry cot is suitable for transporting children from birth up to 9 kg in a lying position. The carry cot is not suitable for children who can sit or roll independently or who can raise themselves on their hands and knees.
- You can also use the carry cot separately from the frame.
- Regularly check the bottom, the edges and the carry straps on the carry cot for signs of wear and tear.
- Make sure that the frame has fully been unfolded and the brake blocked during all actions indicated below.

Place the carry cot adapters (j)

- There are two foldable attachment points on both sides of the frame. Make sure that the attachment points are in a vertical position.
- The adapter marked with 'R' is placed on the right side of the frame, the adapter marked 'L' is placed on the left side.
- Slide the adapters in the attachment parts and press solidly until you hear a click.

Place the carry cot (k)

- Orientate the carry cot such that it is directed rearwards on the frame.
- Hold the carry cot by the handles on both sides of the cot and place directly above the adapters.
- Slide the carry cot over the adapters and press solidly until you hear a click on both sides.
- Check that the carry cot has been placed horizontally and has been attached properly by trying to lift it from the frame.

Remove the carry cot (l)

- Hold the carry cot by the handles on both sides of the cot. Press and hold the unlock buttons.
- Lift the carry cot in vertical direction of the adapters.

Remove the carry cot adapters (m)

- Pull the unlock buttons on the inside of the adapters upwards and vertically remove the adapters from the attachment points.

The hood (n)

- The hood can be unfolded by moving it upwards.
- Push and hold the buttons on both sides of the hood. The hood can now be folded downwards.

The carry straps

- The carry straps must be clicked into the plastic components in order to carry the carry cot.
- Always ensure that the carry straps have been removed if a child is placed in the carry cot.

Assemble the rain cover on the carry cot (o)

- Make sure that the hood of the carry cot has been unfolded.
- Place the rain cover from top to bottom over the carry cot and make sure that the rain cover attaches well all around the bottom of the carry cot.

The seat (6 months – 25 kg)

- The seat is suitable for children from 6 months up to 25 kg who can sit independently.
- The seat can be folded and unfolded with the frame and does therefore not need to be removed from the frame.
- The back support and leg support are adjustable.
- Make sure that the frame has fully been unfolded and the brake blocked during all actions indicated below.

Place the seat (p, q)

- The seat can be placed on the frame in both directions.
- There are two foldable attachment points on both sides of the frame. Make sure that the attachment points are in a vertical position.
- Stand at the front side of the frame.
- Hold the seat on both sides at the unlock buttons above the attachment points and push the seat downwards until you hear a click.
- Check that the seat has been attached solidly by trying to lift it from the frame.

Remove the seat (r)

- Stand at the front side of the frame. Hold the seat on both sides at the unlock buttons and pull the buttons upwards with your fingers. The seat can vertically be removed from the attachment points.

Fold the frame with the seat directed forwards

- Stand behind the frame and make sure that the back support of the seat is standing upright.
- Push the buttons on both sides of the push bar and turn the push bar downwards until it has reached its lowest position.
- This position is indicated by means of a marking on the hinge point.
- Pull the unlock buttons on the inside of the frame towards you and then push the top part of the frame downwards.
- Pull the button at the back of the seat upwards, hold this upwards and tilt the back support of the seat backwards until it is fully flat.
- Push the buttons on both sides of the leg support and push the leg support fully downwards.

Adjust the back support (s)

- Pull the button at the back of the seat upwards and hold it upwards.
- The back support has 4 positions. Place the back support in the desired position and release the button to lock the position.

Reclined carriage position (t)

- The seat has a reclined carriage position to make the seat suitable for children from birth. The use of a suitable cot is always recommended and preferred for children from birth up to the age that your child can sit up unassisted.
- To put the seat in the reclined carriage position, put the leg rest in its highest position and the backrest of the seat in its fully reclined position. Release the two press studs on each side of the seat.
- Open the zipper around the leg support. There is a fabric wall in the pocket behind the leg support, which you can pull out. Now you can put the wall up and attach the two press studs on each side onto the seat. The press studs of the seat can now be attached to the press studs of the wall.

Adjust the leg support (u)

- Lift the leg support to place it upwards.
- Push the buttons on both sides of the leg support and push the leg support downwards to lower it.

Attach and remove bumper bar (u)

- Push the ends of the bumper bar in the thereto designated notches in the seat until you hear a click.
- Press the unlock buttons on both sides of the bumper bar and remove the bumper bar from the seat.

The hood (v1, v2)

- Hold the front hood bar in the centre and move it forwards or rearwards to adjust the hood. (v1)
- Open the zipper in the centre to further enlarge the hood. Close the zipper to again reduce the hood. (v2)
- Pull the flap on the front side of the hood outwards to additionally enlarge the hood. Push the flap inwards to again reduce the hood.

The integrated foot step (w)

- There is a zipper around the leg support of the seat. If so desired you can open this zipper to thus create a higher foot rest for your child. The child can then place the feet on the aluminium bar of the leg support. When your child gets bigger you can again close the zipper and your child can place the feet on the plastic foot rest of the frame.

Assemble the rain cover on the seat (x)

- Make sure that the hood of the seat is in the upright position.

- Possibly open the zipper in the rain cover to adapt it to the enlarged hood of the seat.
- Place the rain cover from top to bottom over the seat and make sure that the rain cover is attached well behind the back support and over the leg support.

The 5-point safety harness (y1, y2)

- Place your child in the seat and make sure that the legs of your child are placed on each side of the leg piece.
- Make sure that the hip and shoulder belt is positioned correctly over your child and place both plastic clamps in the central part of the harness attached to the leg piece.
- To adjust the length of the shoulder straps, loosen the shoulder protectors from the belt by undoing the snap buttons. This will reveal the belt buckles. Adjust the length by sliding the buckles along both shoulder straps until your child is comfortably secure. After adjusting, press down both snap buttons to relock the shoulder protectors in place.
- The back support contains three positions for the shoulder belts. To adjust the position you remove both shoulder belts by moving the attachment rings through the openings in the back of the seat. Move the attachment rings through the desired openings so that the shoulder belts are positioned properly.
- Regularly check the length and position of the belts and adjust, where necessary.
- If the waist or crotch strap needs to be reassembled move the attachment ring through the corresponding opening.

Maxi-Cosi car seat

- The Maxi-Cosi car seat adapters are suitable for use with the following Maxi-Cosi group 0+ car seats: Maxi-Cosi Mico, Maxi-Cosi Citi.
- Always observe the instructions in the manual of your Maxi-Cosi car seat before you start using the car seat.
- Make sure that the frame has fully been unfolded and the brake blocked during all actions indicated below.

Place the Maxi-Cosi adapters on the frame (z)

- There are two foldable attachment points on both sides of the frame. Make sure that the attachment points are in a vertical position.
- The adapter marked with 'R' is placed on the right side of the frame, the adapter marked 'L' is placed on the left side.
- Slide the adapters in the attachment parts and press solidly until you

hear a click.

Place the Maxi-Cosi car seat on the adapters

- Orientate the Maxi-Cosi car seat such that it is directed rearwards on the frame.
- Hold the Maxi-Cosi car seat with the central hinge points of the support bar directly above the adapters.
- Lower the Maxi-Cosi car seat and press solidly into the adapters until you hear a click.
- Check that the Maxi-Cosi car seat has been placed horizontally and has been attached properly by trying to lift it from the frame.

Remove the Maxi-Cosi car seat from the adapters

- Operate the unlocking system of the Maxi-Cosi car seat.
- Lift the Maxi-Cosi car seat straight up from the frame.
- Remove the Maxi-Cosi adapters from the frame (z).
- Pull the unlock buttons on the inside of the adapters upwards and vertically remove the adapters from the attachment points.

mutsy.com

Nieuwkerksedijk 14

5051 HT Goirle

the Netherlands

T + 31 (0)135345152

F + 31 (0)135341163

E info@mutsy.nl



simple human magic