

E Using the gate

Before using the gate ensure that it is fitted correctly and is secure.

Opening the Gate

Push the slider on the top of the handle forward and hold it there while squeezing the lever underneath. Release the slider. This lifts and secures the locking latch into the open position. The gate door can now be opened.

Closing the Gate

Manually close the gate door and push the slider on the top of the handle forward. The locking latch will drop and lock over the gate frame.

Do not slam or swing the gate door shut – manually push it closed.

Always make sure the gate is shut and locked fully before leaving unattended.

Removing the Gate

This gate is fitted with tamper proof handwheels. The top two handwheels can only be slackened off whilst the gate door is in the open position and the pressure released by pulling the side bars away from the wall cups.

F Maintenance

Check the gate periodically to ensure that the wall surface, wall cups, spindles, handwheels and locking devices are all functioning correctly. Additional and replacement parts should only be obtained by contacting the Love'n Care Service Department via the Helpline.

To clean, wipe the gate with a damp cloth.

G Extensions


Gate extension are available in 3 sizes: 6.4 cms, 12.9 cms and 32.4 cms.

Extensions can be used to extend the gate up to a maximum of 148 cms.

'Y' Spindles are available for fitting gate to rounded newel posts.

Extensions and 'Y' spindles can be obtained from your stockist or the Love'n Care website.

Caution: Do not extend to more than 148 cms.

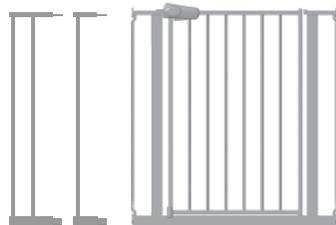

Customer Care Line: (02) 9774 4655

Love'n Care Pty Ltd

297 Canterbury Road, Revesby, NSW 2212

Tel: (02) 9774 4655 Fax: (02) 9774 4633

Email: info@lovencare.com.au Website: www.lovencare.com.au

love'n care™ for the safety and comfort of your child

Minimum Opening
75 cm

Maximum Opening
83 cm

The Love'n Care Easyfit Gate

Manual Closing System

Fitting Instructions

**IMPORTANT! READ AND FOLLOW
THESE INSTRUCTIONS CAREFULLY
AND KEEP FOR FUTURE REFERENCE**

WARNING: Incorrect installation can be dangerous.

WARNING: Do not use the safety barrier if any components are damaged or missing.

WARNING: The safety barrier must not be fitted across windows

This Safety Barrier conforms to EN1930:2011 when fitted as instructed.

This Safety Barrier is designed for children up to the age of 24 months.

 
Be aware of hazards with children using or climbing over the safety barrier.

This safety barrier is for domestic use only.


Patent numbers: EP 1954908 & 1392951 US 7131235 AUS 2002249451

A Contents


1 HANDWHEEL x 4



2 SPINDLE x 4

 

3 WALL CUP x 4

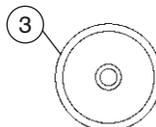

4 ADHESIVE PAD x 4



5 SCREW x 4




EASYFIT GATE

B Assembly

Screw the handwheels (1) fully onto the spindles (2).

Make sure that they are the correct way round as shown in the diagram.


Insert one spindle assembly into each corner socket of the gate.

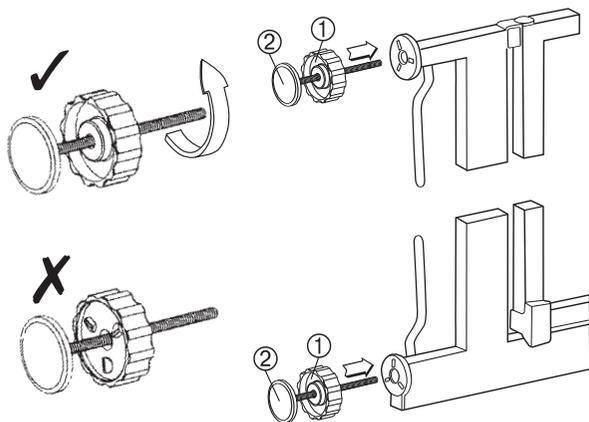

C Location

⚠ WARNING: INCORRECT FITTING OR POSITIONING OF THIS SAFETY BARRIER CAN BE DANGEROUS.

The gate should be positioned so that it opens away from the stairs.

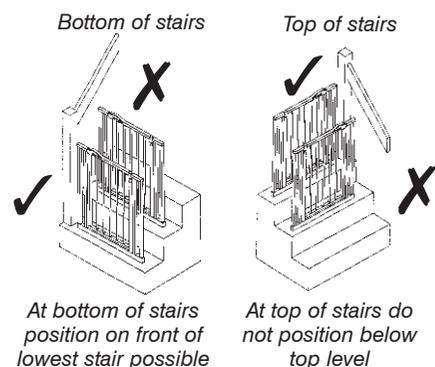

For wider openings, gate extensions are available.

Fixing surfaces must be suitable for the purpose and structurally sound.

Note: Fitting to some surfaces may require the separate purchase of appropriate fixing aids (eg. wall plugs)

THIS GATE OFFERS THE FOLLOWING FIXING OPTIONS:

✓	LOW PRESSURE MOUNTING WITH SCREWED WALL CUPS
✓	LOW PRESSURE MOUNTING WITH ADHESIVE WALL CUPS

SUITABLE SURFACES

	RIGIDLY SUPPORTED WOODEN SURFACE (eg. DOOR FRAME/SKIRTING BOARD)	UNSUPPORTED WOODEN SURFACE (eg. STAIR/NEWEL POST)	PLASTERED SURFACE	PLASTER BOARD STUD WALL - WOODEN SUPPORTING BATTEN RECOMMENDED	WALLPAPERED SURFACE	METAL SURFACE (eg. ALUMINIUM/STEEL DOOR FRAME)	PLASTIC SURFACE (eg. UPVC DOOR FRAME)	CERAMIC TILED SURFACE
✓	✓	✓	✓	✓	✓	✓	✓	✓
✓	✓	✓	✓	✓	✗	✓	✓	✓


D Installation

⚠ WARNING: NEVER USE WITHOUT WALL CUPS

⚠ WARNING: THIS GATE SHOULD BE POSITIONED SO THAT IT OPENS AWAY FROM THE STAIRS

Gate opening directions

The gate can be set up with the gate door opening in either direction as required. This can be achieved by turning the gate around but if this is not suitable the direction of the door can be reversed by unscrewing and removing the door stop at the bottom of the gate door and refitting it on the other side.

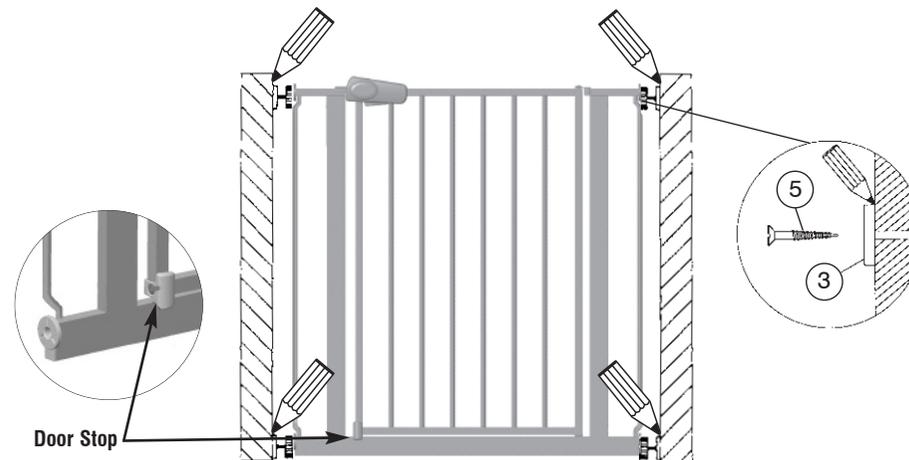

Fitting the Gate: Do not remove the gate door securing tie until the gate has been fitted.

- 1 Position the gate in the centre of the gap, ensuring that it is upright.
- 2 Adjust the left and right handwheels evenly until the gate is fixed in position with the wall cups (3) held in place.
- 3 Mark the positions of the 4 wall cups and remove the gate.
- 4 Follow the correct fixing method as detailed in the chart opposite, stick or screw the wall cups to their marked positions using the adhesive pads (4) or screws provided (5) together with the appropriate wall plugs or fixing aids.

CAUTION: If securing wall cups to a wallpapered surface, or where paint is flaking or blistered, screws must be used.

- 5 Reposition the gate making sure that the **gaps between the outside bars and the fixing surface are equal**. Locate the spindles into the wall cups. Turn the bottom handwheels until they both just touch the gate frame. Then tighten until secure.
- 6 Turn the top handwheels until they touch the gate frame. Tighten both handwheels an equal number of turns until the arrow on the locking latch lines up with the vertical upright.
- 7 Check that the doorstop is fitted so that the gate door only opens away from the stairs. If it does not, either turn the gate around or unscrew and fit the door stop on the opposite side of the tube upright and retighten the screw.
- 8 Remove the securing tie from the gate door. The gate is now ready for use.