

OPERATING THE SEATBELT

1. To lock, simply press down on the red seat belt lever with each individual buckle's pin engaged into the corresponding wheel dog. The stroller may secure a slight forward or rearward movement, a pop or the up and down lever is engaged.
2. To unlock, simply lift the red seat belt lever up once by lifting the red lever.

IMPORTANT: Always use the seat belt when engaged by the wheel dogs by pressing both the red seat belt levers. Always seat a child when the stroller is locked. It will not roll away. Extra caution is required when the stroller is on wet or uneven surfaces.

FOLDING / OPENING YOUR STROLLER

Close the canopy by:

1. Pull the rear canopy back up against the handle.
2. Fold the front canopy back until it is flat to the stroller body.
3. Press the release button in the centre of the handle while simultaneously squeezing the fold button in the centre of the handle. The canopy should then begin to fold.
4. Release the handle and pull up on the front strap until the stroller is fully folded.
5. Secure the stroller in the folded position by engaging the fold strap, located on the right side of the stroller handle, over the roller on the rear handle.

To open your stroller:

1. Release the folding strap.
2. Starting behind the stroller, lift up the stroller handle with both hands until it pops up fully upright and locked into the open position.

IMPORTANT: Always test that the frame is fully locked prior to placing your child(ren) in the stroller.



HI-RISE TANDEM

BP 1821

INSTRUCTIONS

IMPORTANT: Retain this instruction for future reference



WARNINGS:

Do not leave children unattended. Always keep children in view.

Maximum weight, 35 lbs. (15.9kg) per seat.

This stroller is to be used for only two children, one per seat.

Please follow these instructions carefully. Retain these instructions for future reference and future use.

Baskets should only be used for parcels of 15 lbs (6.9kg) or less.

Warning: Remove clear protective wrapping from padded bar before using stroller.

Restrain your children with waist straps at all times so that children cannot stand or fall out.

Keep your children away from folded, free-standing stroller, so that it does not fall on your child.

Set brake when stroller is not being pushed, so stroller will not accidental roll away.

Periodically lubricate the wheels and metal parts to keep your stroller running smoothly.

Dry off stroller with a soft cloth if used in inclement weather to assure longer product life.

Periodically check anchoring straps beneath seat pad to ensure they are secured to frame.

Do not allow children to climb unassisted into stroller. Do not allow children to play with or hang on stroller, as stroller may tip over.

Do not hang bags on handlebar or place parcels on top of canopy, stroller may tip over.

Do not leave stroller unattended on hill or incline even with brakes engaged, stroller may slide down the hill.

Do not push stroller up or down stairs with children in stroller, the children could fall out and injure themselves.


ASSEMBLY & OPENING



Child's tray




Canopy

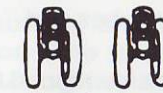

Front wheels



Foot rest

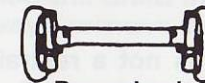

Rear wheels



Stroller

Remove the stroller from the carton. The front wheels, rear wheels, child's tray, footrest and front canopy all need to be installed prior to use.

Unfold your stroller:


1. Lean the stroller so that the handle and rear frame tubes are resting on the floor and the front wheel tubes are pointing upward.
2. Position the front wheel assemblies so that the large hole will slide over the front leg tubes.
3. Push down on each assembly so that it locks into place on each front tube.

(IMPORTANT: Pull firmly on each wheel and test that it is locked securely in place.)

4. Lean your stroller forward to rest on the front wheels.
5. Install the rear wheel assembly, positioning it so that the brake levers are facing away from the stroller.
6. Place the wheel housings over the wheel tubes. Press each of the spring loaded buttons in turn and simultaneously push the corresponding housing downward over the tube until it locks into place.

(IMPORTANT: Pull firmly on the rear assembly and test that it is locked securely in place.)


7. Snap the footrest onto each of the front legs just below the seat.
8. Push downward on the footrest until it snaps onto the "U" shaped frame cross member.

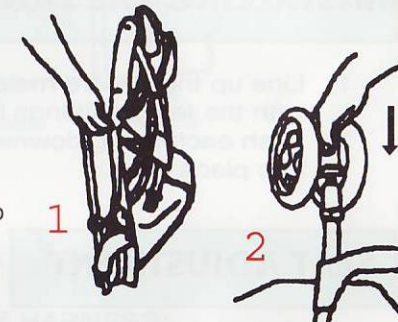

1



2

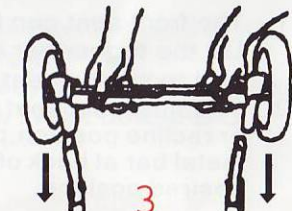

3



4

INSTALLING THE FRONT TRAY


1. Line up and insert the side channels in the tray with the front leg tubes and insert.
2. Swing the latch on either side around the tube and lock into place.
3. To remove the tray simply reverse this procedure.



IMPORTANT WARNINGS: The front child tray is not a restraint device. Always secure your child with the harness restraint systems provided. **DO NOT** lift the stroller by the front child tray. **ALWAYS** use care when attaching the front tray with a child in the stroller.


INSTALLING THE FRONT CANOPY

1. Line up the square male fittings of the canopy with the female fittings in the armrest housing.
2. Push each fitting downward until each snaps into place.

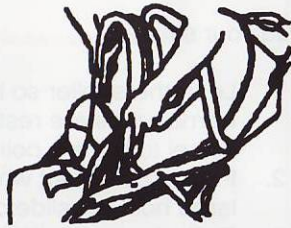

SEAT ADJUSTMENT


1. The front seat can be reclined to 2 positions. Lift the trigger bar in the rear of the front seat and move the seat to the required position.
2. To adjust your seat in either the upright, or recline position, pull up on the metal bar at back of seat and adjust to desired position.

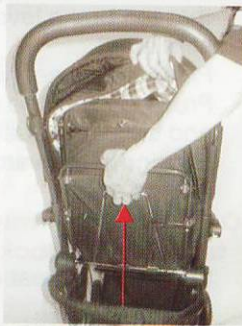

IMPORTANT WARNING: The fully upright positions should only be used for a child that is at least six months of age.

SECURING YOUR CHILDREN IN THE STROLLER

IMPORTANT WARNINGS: When putting a child or children in the stroller it is important to avoid possible tipping back of the stroller due to weight imbalance. When using the stroller with only one child, always place the child in the front seat. When using the stroller with 2 children, always place the heavier child in the front seat. Always place the child in the front seat first. When removing the children, always remove the child in the rear seat first.

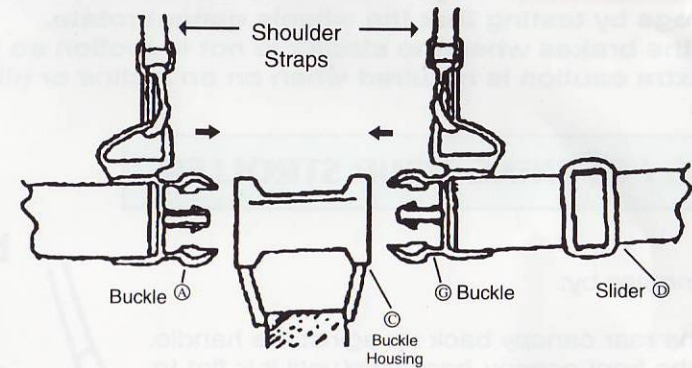

TO SECURE YOUR CHILD IN THE HARNESS:

1. Insert Buckles (A) and (B) into either side of the Buckle Housing (C). Keep inserting until they click into place securely.
2. Carefully adjust the harness straps to snugly fit your child by adjusting the Sliders (D) located on all Shoulder Straps, Waist Straps and Crotch Strap.

The harness should be snugly fitted to the baby's body, tight enough so that the baby cannot wriggle itself free of the straps but loose enough so as not to cause the baby any discomfort.


TO OPEN THE HARNESS:

1. Release the Buckle Prongs □ Squeeze on the top and bottom prongs simultaneously and pull apart from the Buckle Housing.

This process may be difficult as your buckle system has been designed to meet very stringent safety standards to ensure that a child cannot release the harness unaided.

USING YOUR BRAKES

1. To lock, simply press down on the the brake lever until each individual brake' s pins engage into the corresponding wheel cog. *The stroller may require a slight forward or rearward movement in order to line up the brake pins in the cogs.*
2. To unlock, release the brake pin from the wheel cogs by lifting the brake lever.

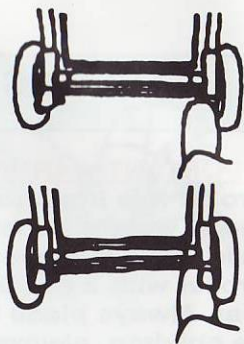


IMPORTANT WARNING: Always check that the brakes have engaged in the wheel cogs by testing that the wheels cannot rotate. Always set the brakes when the stroller is not in motion so that it will not roll away. Extra caution is required when on an incline or hill.

FOLDING / OPENING YOUR STROLLER

Close the canopies by:

1. Pull the rear canopy back up against the handle.
2. Fold the front canopy *backward* until it is flat to the stroller body.
3. Press the release button in the centre of the handle while simultaneously squeezing the fold button in the centre of the handle. The stroller should then begin to fold.
4. Release the handle and pull up on the front tray until the stroller is fully folded.
5. Secure the stroller in the folded position by swinging the fold latch, located on the right side of the stroller handle, over the extended rivet head on the armrest.

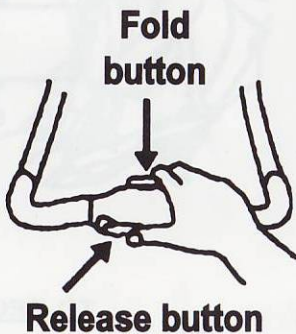

To open your stroller.

1. Release the folding latch.
2. Standing behind the stroller, lift up the stroller handle with both hands until the frame is fully erect and locked into the open position.



IMPORTANT: Always test that the frame is fully locked prior to placing your child(ren) in the stroller.