



Thank you for purchasing this quality *LoveNCare* item from our exclusive range of baby products. This exceptional design combines some of the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights including its durability and reliability. Your new product has been manufactured to comply with the latest Australian Safety Standards and comes with a 12 month warranty.

As you will soon learn there are many more wonderful features about your new *LoveNCare* product.

**BASSINET  
INSTRUCTION BOOKLET**



**COMPLETE BASSINET**

**BP F250**

**INSTRUCTION METHOD**


**[www.lovincare.com.au](http://www.lovincare.com.au)**

**Congratulations, on purchasing another reliable product from  
Love n Care**

**IMPORTANT!!!**

**READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY**

1. You should have

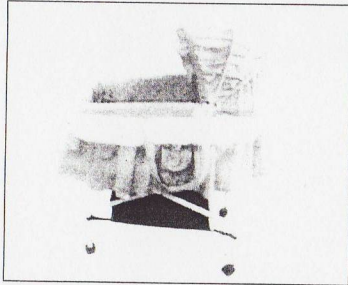

- 1 packet of 4 castors
- 1 stand
- 1 carry bassinet -includes, liner pillow and mattress

2. Set the stand on a flat surface and push down with your thumb on the two braces which will lock the stand into the open position.

3. push the four locking castors into the ends of stand, making sure the castors are seated firmly into the metal tube so that the bassinet will set level.


4. Reach into the centre of the stand and swing the two curved chrome safety guards up and lay them in place on top of the stand.

5. Inspect the stand. braces, safety guards and castors for any damages. The castors should roll freely when the lever is pushed up and brake when pushed down.




6. The Baby Carry Bassinet has come to you in an unassembled form. Remove the pad from the inside of the Bassinet to reveal the chrome wire braces and the hardboard bottom. Move the macerial on

the sides so you can see that the chrome wire braces are crossed. As you lift the top rim of the bassinet you will see that the chrome wire braces begin to move in opposite directions. Continue to lift the top rim to form the bassinet and into the four metal catches. Be sure you have centred the chrome wire braces in the middle of the hardboard bottom as you push the two braces into all four catches.

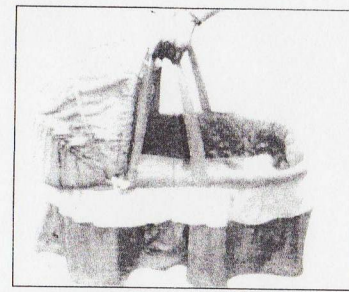

(Return the pad to the Bassinet making sure that on material is on the sleeping area)


7. To raise the hood into place, simply grasp the hood in the middle of the arc and pull upward, Tighten the tow plastic knobs on each side of the hood to hold it in the desired position.

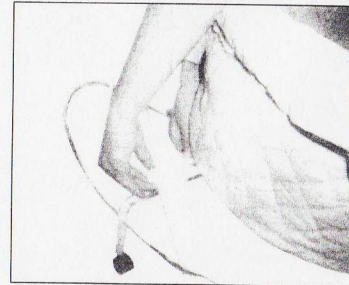

8. To attach the Carrying Bassinet to the stand . Simply lift the bassinet by the tow side handles and set it on the stand making certain the both ends are setting on the tubular frame and are inside the two safety guards.

Reach under the two ends of the Bassinet and snap together the two quick release snaps that hold the bassinet securely on the stand.

9. When carrying the bassinet baby inside ,always use two hands and utilize both handles.

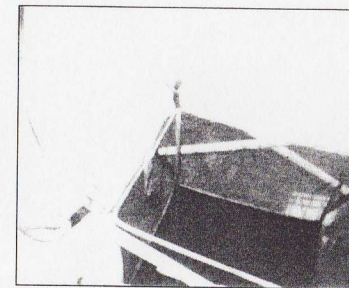

**WARNING**

**WHILST BABY IS IN THE CARRY BASSINET**

**DO NOT** - Let children touch the bassinet

**DO NOT** - Move the Bassinet with the legs attached

**DO NOT** - Set anything on the bassinet

**DO NOT** - Use in a motor vehicle or any moving

10. Only recommended for babies to weigh up to 9 kgs, or the baby should be removed from the Bassinet as he or she become more active and before the baby is able to turn on a flat surface.

11. Be familiar with safe baby sleeping rules concerning loose blankets, pillows ,toys etc.Sudden infant Death Syndrome has been associated with suffocation due to loose materials the crib.

“ Important. Retain this instruction for future reference. ”